



ColorMeter Pro

Features

Feature 1

ColorMeter Pro is a colorimeter and a spectrophotometer

- ✓ Its working principle is same as spectrophotometer for accurate color test result.
- ✓ It can measure L^*a^*b , L^*Ch , RGB, Hex and other color value under D65/D50 illuminant.
- ✓ Pass or fail judgment can be seen from instrument screen directly.

ColorMeter Pro





Feature 2

Portable and Massive Color Card Database

- ✓ Personal color databases can be created in cloud by the APP
- ✓ no need to carry big and heavy color card, customer can find the closet/similar color easier and faster

ColorMeter Pro

Feature 3

It is a color capturer.

ColorMeter Pro can help you to collect colors anytime and anywhere to save the color data of Lab, RGB and other color values, it is good tool for capturing color.

ColorMeter Pro




Feature 4

ColorMeter Pro

Measure From Mobile Phone APP



Color Difference

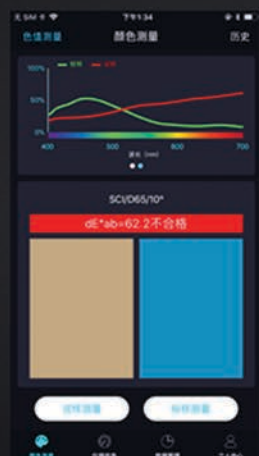

Reflectance



Measure Color



Find Similar Color

Feature 5

Auto Black and White Calibration

ColorMeter Pro adopts advanced auto-sensing function for auto black and white calibration for easier and correct color test



White Tile Top Quality Ceramic
Brightness > 98 | Wear-resistant

Feature 6

Continuous Test 10,000 Times for Single Charge

Instrument can be used while charging when battery is low.
Adopt Type-C interface

Type-C

Interface




* When charging, please keep the charging port and charging environment dry.

Feature 7

D/8 Geometry Measure Real Color

ColorMeter Pro adopts D/8 (SCI) geometry to measure material surface accurately and objectively, the test result is not affected by surface texture or material of the object

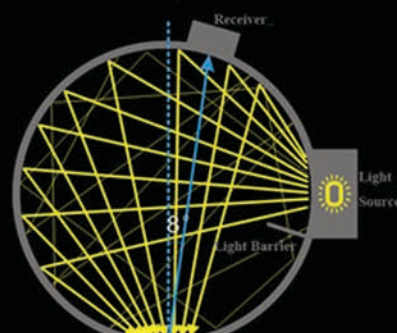

Feature 8

Advanced Technology

26 National and International Patents



ColorMeter Pro Advantages

- ✓ 20 kinds of color indices with 26 kinds of illuminants
- ✓ Find similar color, portable color card database
- ✓ Excellent inter-instrument agreement for consistent result between different units.
- ✓ Auto black and white calibration for easier operation
- ✓ Compact instrument body for accurate color test
- ✓ Instrument is with screen, single unit can be used to measure color.
- ✓ Long battery life, continuous test 10,000 times for single charge

